

# Doboy HS-CII Series Portable Hand Sealer.

LIGHT ON WEIGHT. HEAVY ON PERFORMANCE.

## INDUSTRIAL GRADE, PORTABLE SEALER

The HS-CII is a lightweight, industrial-grade, portable band sealer that offers exceptional value and packaging performance. The HS-CII produces a 1/8" wide seal on a variety of heat sealable materials.

## SEALABLE FILMS

The HS-CII dependably seals most films including polyethylene, laminate and foil materials in thicknesses from 1-6 mil.

## UNIFORM SEAL CLOSURE

The package seal is consistent, clean and professional-looking on all bag styles and film types.

## SIMPLE OPERATION

Operating temperature and pressure are easily changed to accommodate different bag styles and thicknesses.

### Your benefits

- Lightweight, portable
- Easy to operate
- Affordable solution for sealing bags
- Can be used free-hand if required



# Packaging Line Solution.

Product Handling			Primary Packaging			Secondary Packaging		
Pick & Place	Distribution	Feeding	Flow Wrapping	Vertical Bagging	Bag Sealing	Forming	Closing	Loading
HS-CII								

## Features

- ❑ Cast aluminum main frame and precision machined seal bars
- ❑ Temperature indicator signals when the machine is at the desired sealing temperature
- ❑ Air-cooled cooling bars set the seal for immediate bag handling
- ❑ Felt band wicks ensure a clean sealing surface
- ❑ The HS-CII includes a benchtop mounting clamp
- ❑ An optional cast base is available for tabletop mounting



Clamp comes standard with machine, table top base is optional.


Syntegon Packaging Technology, LLC  
 869 South Knowles Avenue  
 New Richmond, WI 54017  
 USA

Phone +1 715 246 6511  
 Fax +1 715 246 6539  
 Mail [sales.packaging-nrd@syntegon.com](mailto:sales.packaging-nrd@syntegon.com)  
 Web [www.syntegon.com/products/dobby-hs-cii](http://www.syntegon.com/products/dobby-hs-cii)

Subject HS-CII  
 Date 03.2020  
 Department PAUD/MKT

## Technical Specifications

Machine specifications	min.
Length	355 mm (14")
Width	152 mm (6")
Height	152 mm (6")
Weight	6 kg (13 lbs)
Throat	51 mm (2")
Speed	5 m (220")/min.
Electrical specifications	
Standard supply (VAC)	110V
Power supply frequency (Hz)	60
Watts	270W
Amps	2.35A

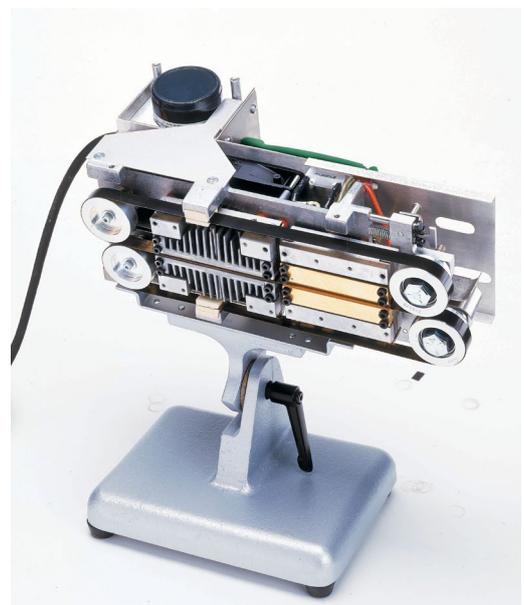

Inside mechanics of the HS-CII Hand Sealer